

RB-xxxx-1 [®]

Operating Instructions



RESISTRON/CIRUS temperature controllers are designed to implement a large number of standard applications. The required secondary voltages and currents can be set within a wide range.

An additional RB-xxxx-1 load resistor must be connected parallel to the current transformer in applications where the current of the heatsealing band is higher than the maximum permissible current of the controller. This load resistor is inserted into the supply lead of the I_R measurement input.

The enclosure of the load resistor can be snapped onto a top hat rail (DIN TS35). It must be installed directly adjacent to the RESISTRON/CIRUS temperature controller. Short connecting cables must be used. It is advisable to twist the I_R measuring wire between the load resistor and the controller.


⚠ The information provided in the ROPEX Application Report shall be heeded when using the RB-xxxx-1 in order to avoid malfunctions.

Technical data

| | |
|--|--|
| Type of construction | Enclosure for installation in the electrical cabinet Snaps onto a standard top hat rail (DIN TS35 rail, 35mm) acc. to DIN EN 50022 Dimensions: 79 x 13mm; height: 53mm |
| Resistance | RB-01R7-1: 1.7ohms; 2.4W RB-04R5-1: 4.5ohms; 2.4W RB-09R0-1: 9.0ohms; 1.2W RB-16R6-1: 16.6ohms; 1.2W |
| Weight | Approx. 30gr. |
| Enclosure material | Plastic, UL-94-V0, self-extinguishing |
| Connecting cable Type / cross-sections | Rigid or flexible; 0.2...2.5mm ² (AWG 24...12) Connection by means of screw terminals |

Exclusive Sales and Service :
www.tossheatseal.com


Wiring diagram

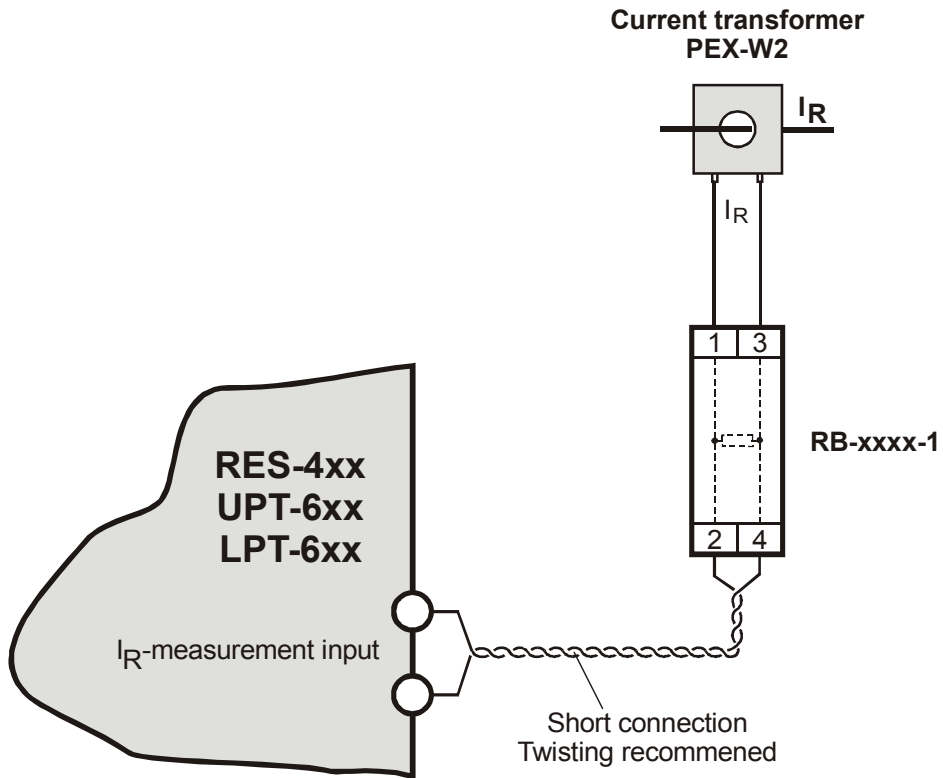

Connection between RB-xxxx-1 and RESISTRON or CIRUS controller

| Controller | RB-xxxx-1 Terminals 2 and 4 connected to (any polarity) |
|--|--|
| RES-401 RES-403 RES-406 RES-407 RES-408 RES-409 | Terminals 10 + 11 |
| RES-402 | Terminals 5 + 6 |
| RES-415 RES-420 RES-440 RES-445 UPT-640 (CIRUS) LPT-640 (CIRUS) | Terminals 8 + 9 |
| RESCON-470 (as of 01/2001) | Terminals 20 + 21 |

Dimensions

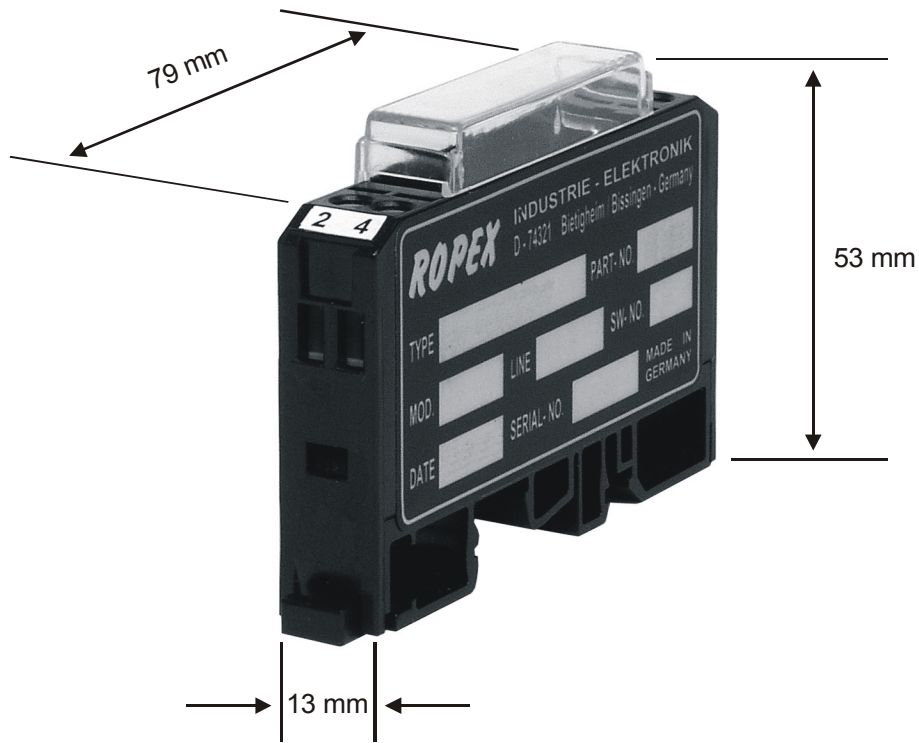

How to order



Load resistor RB-xxxx-1

| | |
|----------------------------------|-----------------|
| RB-01R7-1 (resistance 1.7ohms): | Art. No. 886103 |
| RB-04R5-1 (resistance 4.5ohms): | Art. No. 886102 |
| RB-09R0-1 (resistance 9.0ohms): | Art. No. 886101 |
| RB-16R6-1 (resistance 16.6ohms): | Art. No. 886104 |